1 Removing the Cutting Strip from the Cutter
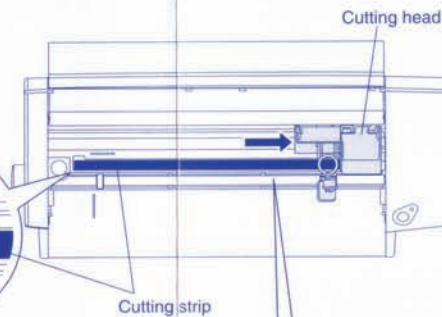
(1) Disconnect the power cable and the USB cable from the cutter.

Power cable

USB cable
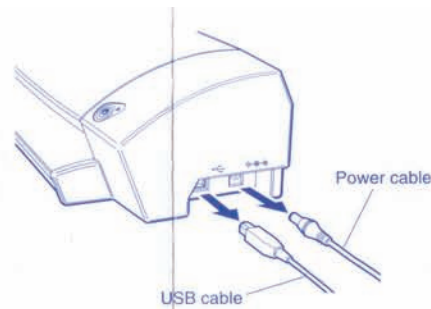
(2) Open the cover and remove the blade assembly from blade assembly holder.

Cover

Blade assembly

OPEN   CLOSE

Lock lever
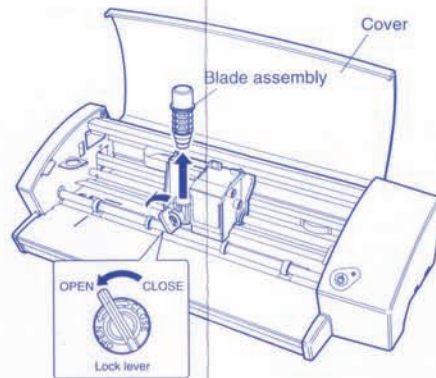
(3) Move the cutting head to the right-hand side of the cutter.

(4) Peel off the cutting strip.

Cutting head

Peel off from this side

Cutting strip
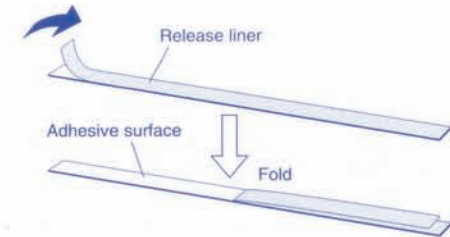
(5) Use alcohol or other glue removers to wipe off any residual adhesive or debris from the area where the cutting strip was affixed.

Wipe this area

2 Affixing a New Cutting Strip

(6) Peel back approximately half off the release liner, and fold it as shown in the illustration.

Release liner

Adhesive surface

Fold

(7) Affix the side from which the release liner was removed (adhesive side down) along the front edge of the groove, leaving a 0.04" gap at the left edge of the groove.

⚠ CAUTION

When affixing the cutting strip, make sure that is completely flat and straight.
A cutting strip that is uneven or curved may be the cause of incomplete cutting or malfunctions.

Cutting strip

Leave a 0.04" gap

Affix so that the strip is aligned with the front edge of the groove
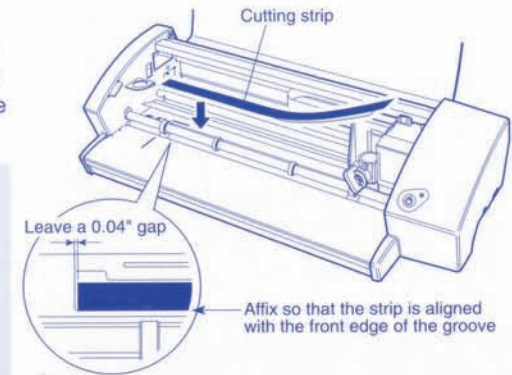
(8) Pass the right end of the cutting strip underneath the cutting head, and then move the cutting head to the left-hand side of the cutter.

⚠ CAUTION

Take care that the cutting strip and release liner do not get caught up in the cutting head.

Pass the cutting strip underneath the cutting head
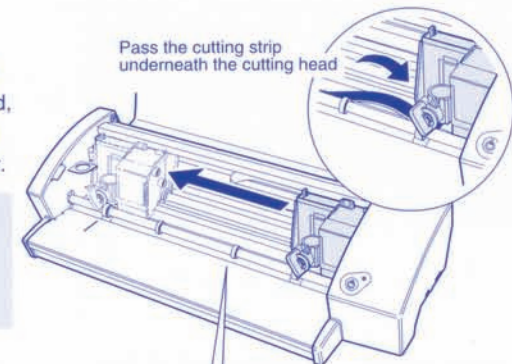
(9) Peel off all of the release liner, and then affix the rest of the cutting strip in the groove. This completes the replacement operation.