





# heat transfer application

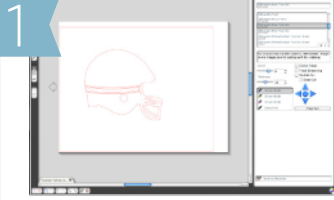

1

Select a shape or font and lay out your design in the Silhouette Studio® software. BE SURE TO MIRROR THE IMAGE so text will appear backwards on the screen.

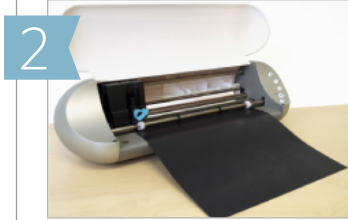

2

Feed the heat transfer material into the Silhouette without a cutting mat with the glossy side down. Select "Smooth Heat Transfer Material" or "Flocked Heat Transfer Material" in the media menu and cut.



3

Peel the negative space of the design off the plastic backing leaving only the design you want to transfer on the clear plastic transfer sheet.



4

Position the design on the desired surface face down so that you see it through the clear transfer sheet. Your text should be right-reading at this point.



5

Place a cloth over the design and place a heated iron on top PRESSING FIRMLY into the design for 45-60 sec.



6

Remove the iron and cloth and gently peel up the transfer sheet. If the heat transfer material continues to stick to the transfer sheet, replace the cloth and iron again making sure to apply pressure.



Wash and dry clothes inside out. Use extreme caution when operating a hot iron. Keep out of reach of children.

NOTE: Silhouette heat transfer material will not adhere to nylon.